

Table of Contents

Welcome.....

3. OTHER RESTRICTIONS	60
Chart License Agreement.....	62

 
Welcome

Getting Started

[Setting up Instruments](#)

[Using Nobeltec TimeZero](#)

User Interface Overview:



1. Nobeltec Button: Click on this button to access the Menus and Options of Nobeltec TimeZero Trident

Working with Charts

Scrolling & Zooming

TimeZero Trident offers a new ultra fast cartographic engine with unparallel

The Zoom Tool is hidden by default. Click on the "Configure" button (at the very end of the Toolbar) to

- < North Up: In this mode, the azimuth is fixed pointing toward the North. The pitch or inclination is

- < Navionics : Select this option to display MapMedia mm3d "Datacore by Navionics" vector charts
- < Raster : Select this option to display *Raster* Charts from Hydrographic Offices (NOAA, SHOM, UKHO,...)

When a Vector Chart is selected (either "HOs S-


Other Overlays

The Chart button in the Ribbons allows the user to display various additional overlays:

- < Select "Tidal Height Stations" to display Tidal Gauge on the Charts.
- <

Routes

 Route Introduction



Note: I n.

- < The Active Route is displayed in red
- <

In this mode, the next Waypoint is automatically switched when your boat icon enters the active

Course & heading Vector

 


Click on the corresponding Boundary Tool (Area, Circle or Line) [rl5(clk5(er)8ck)-5()9(o)-4(n)6()-5(t eZ), dat4(1)n o5(er)8ckl5(

Moving a Boundary:


When the option *"Allow Unselected Object to be Moved"* is enabled (enabled by default in the [General Options](#)), put the cursor over a boundary then drag it (click and hold while moving) to its new position. When *"Allow Unselected Object to be Moved"* is disabled, you have to select the boundary first (click on it) then drag it.

Note: When moving a boundary, make sure that the boundary is displayed entirely on the screen. If the boundary is part



Once the list tab is open at the bottom of

 Online Services



NTa464ne yvcan (r)-5(i)5gOik nn

Installation

InSight Radar Connection

turned ON before the computer is connected to the network (or before the computer is turned ON, if the Ethernet cable stays connected to the computer at all times). If the computer is connected to the network

GY`YWhÍI gY`hY`Zc`ck]b[`=D`UXXfYggĀ

I

: JfghW]W_c b i GWbb' =Df''H\ jg'k]''Ui hca Uh]W]''mYbhYf'h\Y' =D'UXXfYgg'Zcf'h\Y'A -Series (192.168.1.2 in this example). If the M-Series is correctly detected, you should see a green light.

Reference

Options

Options Overview

All preferences and settings within Nobeltec TimeZero Trident are set using the Options window found

- < Variable Color: This option can be set to Depth, Sea Surface Temperature or Speed, but only if the Track Color option is set to Variable.
- < Variable Color Setup: Press the Variable Color Setup button to access the control where you can alter the Track line coloring based on Depth range, Sea Surface Temperature (SST) range, or

<

< Login/Password: enter the Email address used2oddmst5(mt)6(h-3(d13(d)y)10)o Tm11(-3(d13(d)Ac(se)-3(2)5(mv)1

<

 
- < "Other": adds other layers of information necessary for safe navigation (contour lines,

< Presets:

to 12nm, set Gain and Sea Clutter to manual settings (from the Radar Ribbon button). When the STC curve profile is set to a lower number, the sea clutter is only applied in an area closer to the vessel. Setting the curve profile to a higher number causes STC to be applied to more of the image. Note that if the STC curve profile is not set correctly, adjusting the sea clutter (manual or automatic) may not have the desired impact. If you notice that increasing the sea clutter control has no impact on the image, your STC

< White Edge:

the nearest Alarm Zone at any time.



- < Depth Alarm: An alarm sounds when the vessel passes over water shallower than a designated depth value.
- < CPA/TCPA Alarm (Closest Point of Approach/Time to Closest Point of Approach): An alarm sounds when CPA/TCPA fall below the designated values.
- < Proximity AIS Target Alarm: An alarm sounds when the vessel passes within a designated distance from an AIS target..
- < GuardZone Alarm Level:

<

[Getting More Help](#)

[How to Contact Nobeltec](#)

License Agreement

NOBELTEC, INC SOFTWARE LICENSE AGREEMENT

Upon

